WiFi clock (ver A) user manual

1. First Time Setup:

(A) Power on:



Insert two batteries included with correct polarity.




The LED blinks (you can see the reflected light inside the case), and the 3 hands are moving towards 12 o'clock position.

(B) Connect the WiFi clock and your mobile phone:



- Press and hold the M.SET button for 3 seconds, no matter the hands are moving or not.
- The LED stop blinks and remains on, it shows that the clock is ready to connect to the phone.

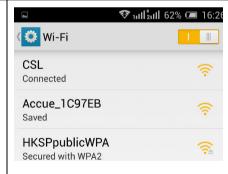


 In the WiFi setting of your mobile phone, select the device labelled "Accue-XXXXXX". (where XXXXXX is the clock's device ID)




Press "Connect". Then the mobile phone will going to connect to the clock.

(C) Enter the web page of the clock to begin setup:

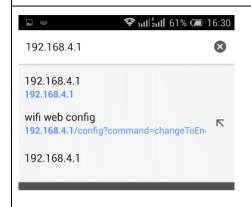

- In your mobile phone, open the web browser. (Any browser is OK.)
- Enter the IP address
 192.168.4.1
 In the URL box and press ENTER.

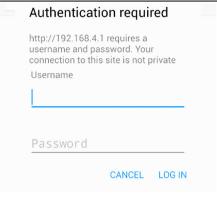

- Type the default value "admin" in both username and password box.
- Press LOG IN to proceed.



Press "change to English" if needed.

(D) SoftAP setup:



- Select "Softap set." In the left menu pane
- In the right content pane, change the "authmode" first by pressing the pull down menu. Now it should be showing the choice "OPEN".



Select "WPAPSK/WPA2PSK".
 This gives the best security.



- Enter the password (at least 8 characters). This is needed to connect the mobile phone next time in step (B).
- Please DO NOT CHANGE the SSID "Accue_xxxxxx".
- Then press the POST button to store the changes.



- Press OK to proceed
- The WiFi connection between the clock and your mobile phone will be lost after 5-10 seconds ⁽¹⁾
- Then, you need to reconnect again by following step (B) and (C)
- This time you will need to enter your new set of password


Remarks:

1. Some models of mobile phone may not disconnect at this moment. So just proceed step (E).

(E) Station setup:




- Select the "Station set" in left menu pane.
- Enter the SSID and the password of your WiFi router in the right menu pane.
- Then press POST button.

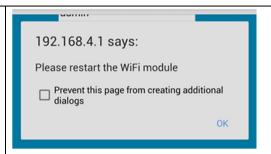


- Press OK.
- Then, go to next step to RESTART.

(F) Restart:

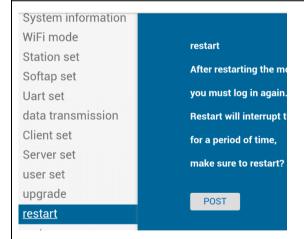

- Select "restart" on the left menu pane.
- Press POST button in the right content pane to restart.

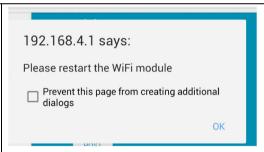

- Press OK to confirm restart.
- The clock will then get the time from the internet.
- In around 5~10 seconds,
 - The LED will go off, and
 - The hands will begin to go to the correct time position.

(In case of connection failed, press REC button in the clock to retry. OR check the configuration by following STEP B to E)