


WiFi clock (Ver C) User Manual

1. Quick Setup Guide

(A) Power on the WiFi clock



- Please insert the 2 batteries included.

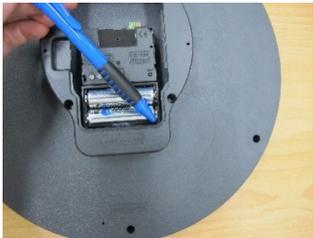


- The LED blinks, and the 3 hands are moving to 12 o'clock position.

(B) Connect the WiFi clock with your mobile phone




- Press and hold the M.SET button for 3 sec, no matter the hands are moving or not.
- The LED stops blink and stays on, showing that the clock is ready to be connected to the phone.

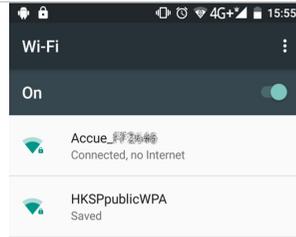


- In your mobile phone WiFi setting, select "Accue_XXXXXX". This is the WiFi clock. The default password is "12345678". Press "Connect".

Remark : Some mobile phone may shows "Connected, no Internet". It should be fine, because the clock didn't connect to internet at this moment.

(C) Enter the web page of the clock to begin setup

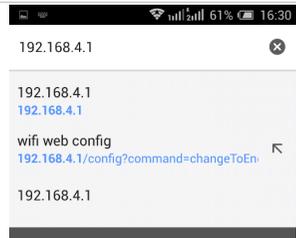

- Open the web browser, type "192.168.4.1" in the URL address bar. (Any browser should do.)

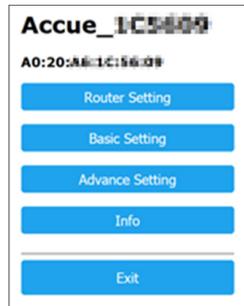


- This is the home screen of setting mode.

(D) Router Setting




- Press the "Router Setting" button.

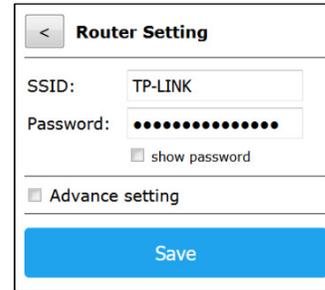


- Enter the SSID and the password of your WiFi router.
- Press "Save" to confirm the change.

(E) Basic Setting

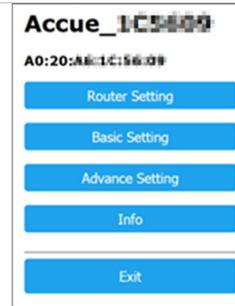

- Press the "Basic Setting" button.

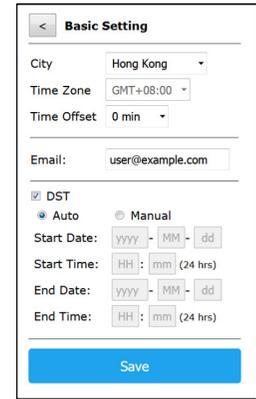


- Change the city if necessary.
- If there is no appropriate choice, choose "Others" as the selection. Then set your preferred time zone.
- Press "Save" to confirm the change.

(F) Exit Setting Mode



- Press the "Exit" button.

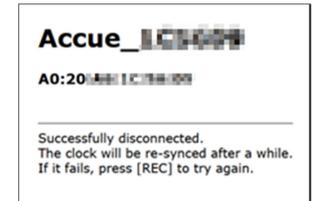

- The clock is then disconnected. The time will be synced after a while.

2. Optional Setting


(A) Router Setting



- Press the “Router Setting” button.

- Tick the checkbox “Advance setting”.
- Enable/Disable DHCP (Dynamic Host Configuration Protocol).
- Enable: The WiFi Clock obtains IP address and networking parameters automatically.
- Disable: IP Address / Subnet Mask / Default Gateway are assigned manually.
- Press “Save” to confirm the change.

(B) Basic Setting

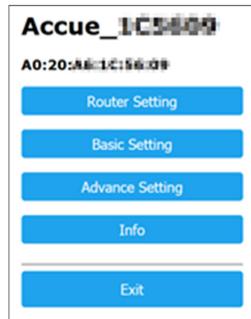

- Press the “Basic Setting” button.

- Set the Time Offset (-45 min to +45 min) if necessary.
- Enable/Disable the DST (daylight saving time) and set “Auto” or “Manual” mode.
- Auto: The clock will get the DST information from database and handle the DST automatically.
- Manual: Custom set the DST Start date/time and End date/time.
- Press “Save” to confirm the change.


(C) Advance Setting



- Press the “Advance Setting” button.

- Change the Clock Name and the password of your WiFi clock.
- Change the NTP Server if necessary.
- Both NTP servers must be provided. If you have only 1 NTP server, fill both fields with the same server name.
- Change the Sync Time if necessary. The clock will automatically synchronize the time daily according to this.
- Press “Save” to confirm the change.

3. Info Screen

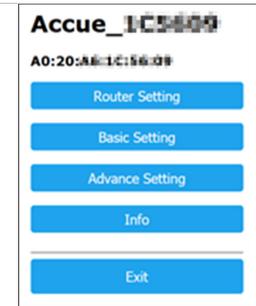

- Press the “Info” button.

- The summary of the setting is shown.

4. Reset to Default Setting

Press and hold [M.SET] and [REC] buttons at the same time for 3 seconds.

You will see the LED turns on. After about 5-10 seconds, the LED will blink 5 times and all settings will be reset to default values. All clock hands will also go to 12 o'clock position and then stop.